



### How to measure a floor for the Philex Underfloor heating mat

1. Calculate the free floor area to be heated. NOTE: You must not fit the Philex underfloor heating mat under fitted units.
2. To calculate the size of the mat, allow a space of 100mm around the edge. Measure the remaining area. If, for instance, the full area is 2.9m x 4.4m, reduce both these measurements by 400mm to 2.5 x 4.0m, the area to be covered is 10m<sup>2</sup>. The size of Philex mat required would be 10m<sup>2</sup>.
3. When the area is not square, split the area into sections that can be measured and calculated as above. A final check can be made by drawing the mat out onto a scale drawing, this way a more accurate assessment of the mat size can be made. Always check the scale of the drawing.
4. The Philex mat size should be given as a guide and all sizes should be checked before ordering or installing.

NOTE: The Philex Underfloor heating mat cannot be reduced in size and the entire mat must be fitted.

### **DO NOT CUT THE RED CABLE**

IT IS YOUR RESPONSIBILITY TO READ ALL INSTRUCTIONS AND CHECK THE SIZE OF THE AREA TO BE COVERED.